

KAPS 500

Pneumatic Manifold Valve operation



Left To right

1. Forward - back traverse
2. Left – Right traverse
3. Vacuum plate Up - Down
4. SMC Dial : roller pressure
5. Cutter Up – Down
6. Vacuum On - Off
7. Foil Platform Up – Down
8. Foil Clutch open – close (adjust pressure using regulator)