



Wasp cutter air fitting access

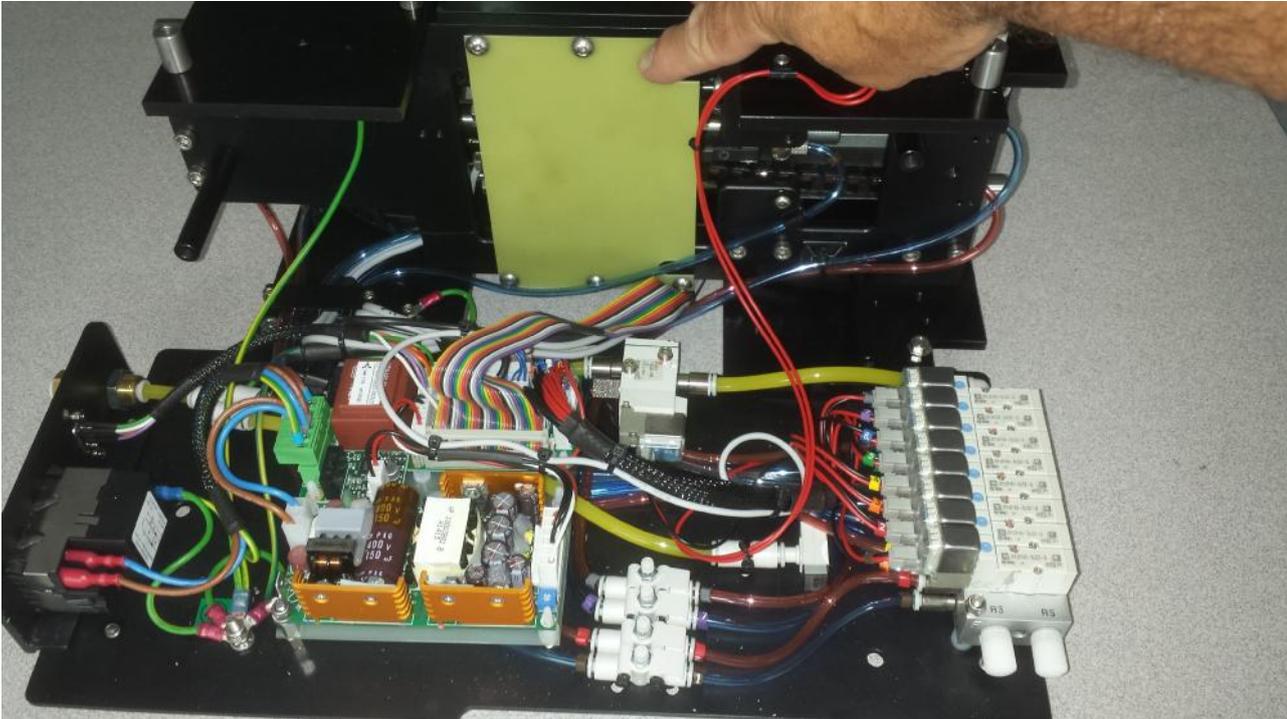

Remove this panel to access air fitting behind, Be careful do not lose the spacer bar fitted!

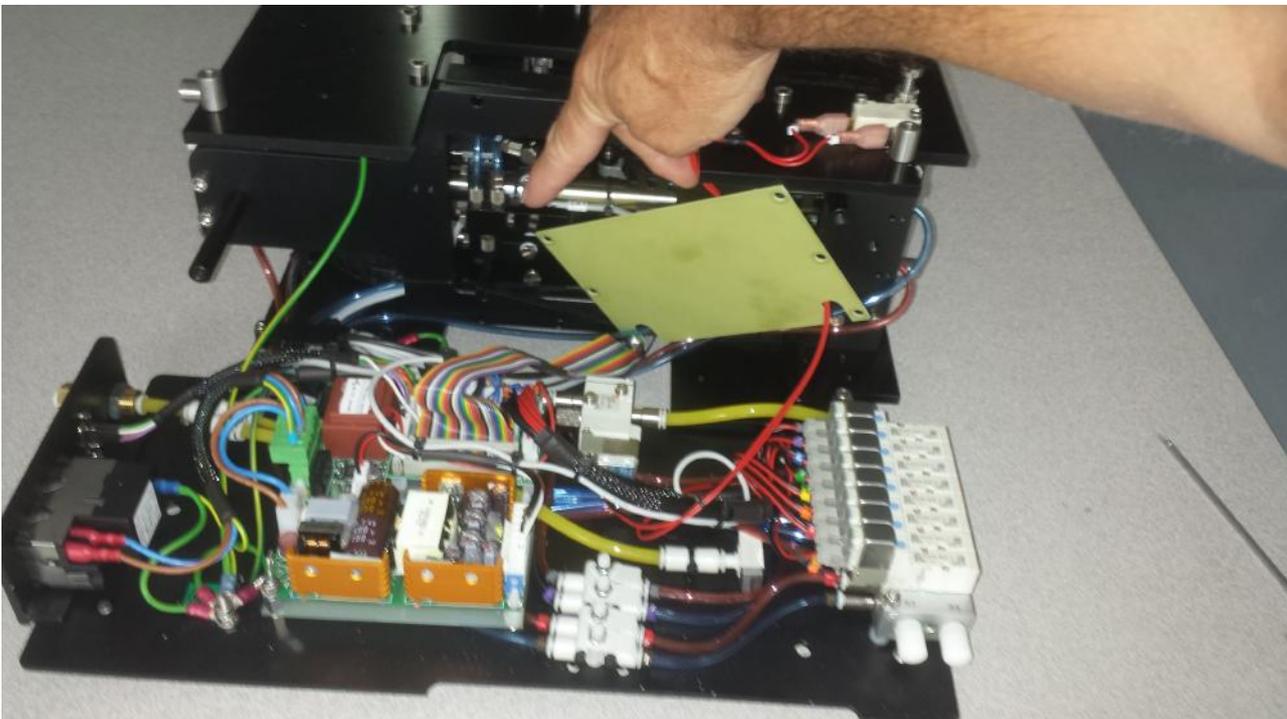

There is an pneumatic fitting assembly here with blanking screws, check here to ensure no air leak present in this area.